



(仅供科研使用，不得用于临床诊断!)

兔白细胞介素 1 受体拮抗剂(IL-1Ra)ELISA 试剂盒

使用说明书 产品货号：**BY-ER772060** 规格：

48T/96T 检测范围：5 pg/mL- 160 pg/mL。

灵敏度：最低检出剂量小于 1.0 pg/mL。

精密度：批内变异系数 CV%小于 10%；批间变异系数 CV%小于 15%。

回收率：回收率在 85%-115%之间。

特异性：本试剂盒识别天然和重组兔白细胞介素 1 受体拮抗剂(IL-1Ra)，与结构类似物无交叉。稳定性：2℃-8℃保存，有效期 6 个月。

用途：用于检测血清、血浆、细胞培养上清液和组织等样本中兔白细胞介素 1 受体拮抗剂(IL-1Ra) 的浓度。

使用前请仔细阅读说明书。如果有任何问题，请通过以下方式联系我们：

官方热线：025-5229-8998 销售部电话：13914481711 技术电话：

15950492658 公司网址：www.byabscience.cn 具体保质期请见试剂盒外包

装标签。请在保质期内使用试剂盒。

联系时请提供产品货号、生产日期（见盒签），以便我们更高效为您服务。

Nanjing BYabscience technology Co.,Ltd

网址：www.byabscience.cn

官方热线：025-5229-8998


监督电话：15950492658



实验原理

本试剂盒采用双抗体夹心酶联免疫吸附试验（ELISA）。在预包被抗兔白细胞介素 1 受体拮抗剂(IL-1Ra) 抗体（固相抗体）的微孔酶标板中，加入兔白细胞介素 1 受体拮抗剂(IL-1Ra) 校准品和待测样本，再加入 HRP 标记的抗兔白细胞介素 1 受体拮抗剂(IL-1Ra) 抗体（酶标抗体），经过温育与充分洗涤，去除未结合的组分，在微孔板固相表面形成固相抗体-抗原-酶标抗体的夹心复合物。加底物 A 和 B，底物在 HRP 催化下，产生蓝色产物，在终止液（酸性溶液）作用下，最终转化为黄色。在酶标仪 450nm 波长上测定吸光度（OD 值），吸光度（OD 值）与待测样品中兔白细胞介素 1 受体拮抗剂(IL-1Ra) 的浓度正相关。拟合校准品曲线，可以计算出样本中兔白细胞介素 1 受体拮抗剂(IL-1Ra) 的浓度。

实验原理图

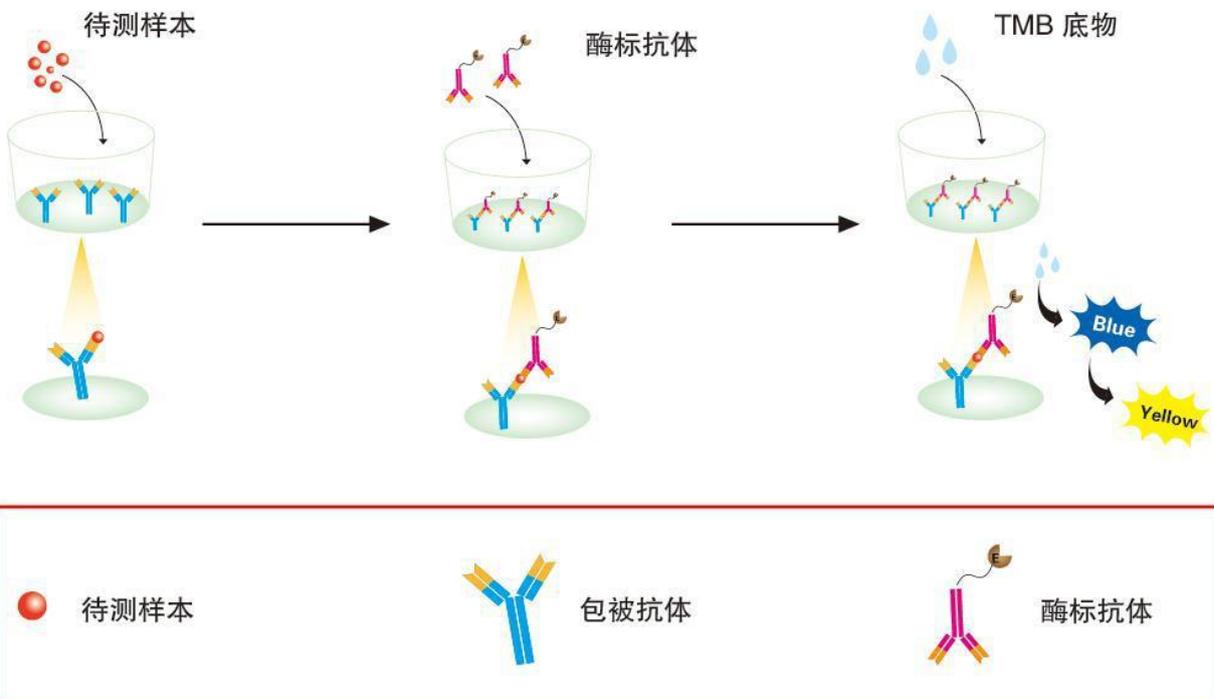



试剂盒组分与保存 未开封的试剂盒保存在 2-8 度，不得使用过期试剂盒。

组分	48 孔配置	96 孔配置	开封后储存
预包被酶标板	48T	96T	2-8℃14 天
标准品	0.3mL*6 管	0.3mL*6 管	2-8℃14 天
样本稀释液	3 ml	6 ml	2-8℃180 天
HRP 标记抗体	5 ml	10 ml	2-8℃14 天
显色底物 A	3 ml	6 ml	2-8℃180 天
显色底物 B	3 ml	6 ml	2-8℃180 天
终止液	3 ml	6 ml	2-8℃180 天
20×洗液	15 ml	25 ml	2-8℃180 天
封板膜	2 张	2 张	
说明书	1 份	1 份	
自封袋	1 个	1 个	

校准品浓度依次为：160、80、40、20、10、5 pg/mL。

注意：1：使用前请检查试剂盒中试剂的标签和数量与表格是否一致。

2：如果试剂盒的组份需要再次使用，请确保上一次使用之后没有被污染。

3：酶标板单次未使用完，要谨记密封放到 2-8℃保存。

试验所需自备试验器材 (不提供，但可协助购买)

- 1) 能够检测 450 nm 吸光度的酶标仪
- 2) 移液器及枪头、加样槽
- 3) 37℃恒温箱或水浴锅
- 4) 准备试剂用的试管、离心管、量筒等
- 5) 蒸馏水或去离子水

Nanjing BYabsience technology Co.,Ltd

网址: www.byabsience.cn

官方热线: 025-5229-8998

监督电话: 15950492658



6) 涡旋振荡器、微孔板振荡器

注意事项 1) 仅供科研使用，不得用于临床诊断。

- 2) 在试剂盒标示的有效期内使用，过期产品不得使用。
- 3) 跟其他厂家的试剂盒或者组分不能混用，使用试剂盒配套的样品稀释液。
- 4) 如果样本值高于最高标准品浓度值，请将样本适当稀释后，再重新测定。
- 5) 待测样本中存在的人抗鼠等异嗜抗体会干扰检测结果，检测前，请排出该因素。
- 6) 通过其他方法得到的检测结果，与本试剂盒测定结果不具有直接的可比性。
- 7) Please wear a lab coat and latex gloves for protection during the test. Especially when testing blood or other body fluid samples, please follow the national biological laboratory safety protection regulations.
- 8) Carry out incubation strictly according to the specified time and temperature to ensure accurate results. All reagents must reach room temperature 20-25°C before use. Store reagents refrigerated immediately after use.
- 9) Improper plate washing can lead to inaccurate results. Make sure to absorb as much liquid as possible from the wells before adding substrate. Do not allow the microwells to dry out during incubation.
- 10) Eliminate residual liquid and fingerprints on the bottom of the plate, otherwise it will affect the OD value.
- 11) The substrate chromogenic solution should be colorless or very light in color.
- 12) Avoid cross-contamination of reagents and specimens to avoid erroneous results.
- 13) Avoid direct exposure to strong light during storage and incubation.

14) The microplate reader used for detection needs to be equipped with a filter capable of detecting a wavelength of $450\pm 10\text{nm}$, and the optical density range is between 0-3.5. It is recommended to preheat 15 minutes in advance before use.

15) The EP tubes and suction tips used in the test are single-use and are strictly prohibited from mixing.

Nanjing BYabsience technology Co.,Ltd

Website: www.byabsience.cn

Official hotline: 025-5229-8998

Supervision phone number:



Sample preparation and storage

The following lists only general guidelines for sample collection and preservation. During the collection and storage of all samples, sodium azide shall not be used as a preservative. If the sample is not analyzed immediately, it should be aliquoted and stored frozen, and repeated freezing and thawing should be avoided.

Cell culture supernatant - centrifuge to remove precipitate, analyze immediately or aliquot and store frozen at -20°C.

Serum - Collect blood in a clean test tube, coagulate at room temperature for 30 minutes, centrifuge at 2000×g for 20 minutes, and collect serum. Analyze immediately or aliquot and store frozen at -20°C.

Plasma—anticoagulate with heparin, citrate, or EDTA, and centrifuge at 2000×g for 20 minutes at 2-8°C within 30 minutes of blood draw. To eliminate the influence of platelets, it is recommended to further centrifuge at 10,000 × g for 10 minutes at 2-8°C. Analyze immediately or aliquot and store frozen at -20°C.

Cell lysis buffer - For adherent cells, remove the culture medium and wash with PBS, normal saline or serum-free culture medium. Add an appropriate amount of lysis solution and pipet several times with a gun to fully contact the lysate and cells. Typically after 10 seconds, cells are lysed. For suspended cells, collect the cells by centrifugation and wash them with PBS, physiological saline or serum-free culture medium. Add an appropriate amount of lysis solution, blow the cells with a gun, and flick them with your fingers to fully lyse the cells. After full lysis, centrifuge at 10000-14000×g for 3-5 minutes and take the supernatant. Analyze immediately or aliquot and store frozen at -20°C.

Tissue homogenate - rinse the tissue with pre-cooled PBS (0.01M, pH=7.4) to remove residual blood (lysed red blood cells in the homogenate will affect the measurement results), weigh and cut the tissue into pieces. Mix the minced tissue with the corresponding volume of PBS (generally

at a weight-to-volume ratio of 1:9, for example, 1g of tissue sample corresponds to 9mL of PBS. The specific volume can be adjusted appropriately according to experimental needs and recorded. It is recommended to add Protease inhibitor) was added to a glass homogenizer and ground thoroughly on ice. In order to further lyse tissue cells, the homogenate can be sonicated or repeatedly frozen and thawed. Finally, centrifuge the homogenate at $5000 \times g$ for 5 to 10 minutes, and take the supernatant for detection.

Urine - Collect in sterile tubes and centrifuge at $2000 \times g$ for 20 minutes. Carefully collect the supernatant. If a precipitate forms, centrifuge again.

Nanjing BYabscience technology Co.,Ltd

Website: www.byabscience.cn

Official hotline: 025-5229-8998

Supervision phone number:



Reagent preparation 1. Before use, all components must be rewarmed

for at least 60 minutes to ensure sufficient rewarming to room temperature.

2. Concentrated washing liquid: The concentrated washing liquid taken out from the refrigerator will produce crystals. This is a normal phenomenon. Heating in a water bath will completely dissolve the crystals. Concentrated detergent and distilled water, dilute 1:20, that is, 1 part of concentrated detergent, add 19 parts of distilled water. 3. Substrate: Substrate solutions A and B, mix thoroughly at a volume of 1:1 before use, and use within 15 minutes after mixing.

Operating procedures: Return all reagents and components to room temperature first. For standards, quality control materials and samples, it is recommended to make duplicate holes.

1. Prepare the working solution of various components of the kit according to the method described in the previous instructions.
2. Take out the required slats from the aluminum foil bag, seal the remaining slats in a ziplock bag and return it to the refrigerator.
3. Set up standard wells, 0 value wells, blank wells and sample wells. Add 50 μL of standards of different concentrations to each of the standard wells. Add 50 μL of sample diluent to the 0 value well. Do not add any to the blank well. Add 50 μL of the sample to be tested to the sample well. .
4. In addition to the blank wells, add 100 μL of horseradish peroxidase (HRP)-labeled detection antibody to the standard wells, 0 value wells and sample wells.
5. Cover the reaction plate with sealing film and incubate in a 37°C water bath or incubator in the dark for 60 minutes.
6. 揭开封板膜，弃去液体，吸水纸上拍干，每孔加满洗涤液，静置 20S，甩去洗涤液，吸水纸上拍干，如此重复 5 次。若使用自动洗板机，请按洗板机操作程序进行洗板，添加浸泡 30s 的

程序，可以提高检测的精度。洗板结束，加底物前，要在干净不掉屑的纸上，充分拍干反应板。（提示：为获得理想的实验结果，必须彻底移除残留液体。洗板完成之后，请立即进行下一步操作，不要让微孔板干燥。）7、将底物 A 和 B 按 1:1 体积充分混合，所有孔中加入底物混合液 100 μ L。用封板膜盖住反应板，37 $^{\circ}$ C水浴锅或恒温箱避光孵育 15min。

8、所有孔加入终止液 50 μ L，在 450nm 波长酶标仪上读取各孔吸光度（OD 值）。

Nanjing BYabscience technology Co.,Ltd


网址：www.byabscience.cn

官方热线：025-5229-8998


监督电话：15950492658




操作流程图

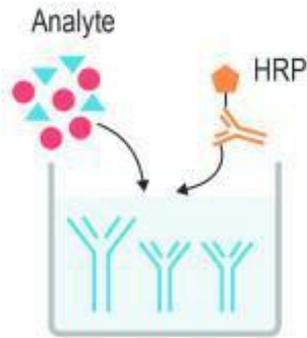


1. 对应板孔中加入50 μ L标准品工作液或样本后，立即每孔加入100ulHRP酶标抗体工作液，37 $^{\circ}$ C孵育60分钟

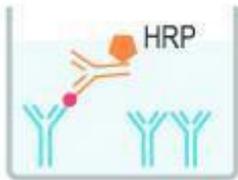


2. 弃掉板内液体，洗板5次

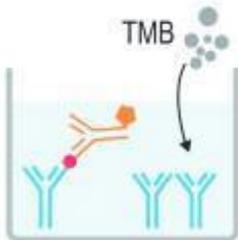

3. 每孔加入底物A溶液50ul，底物B溶液50ul

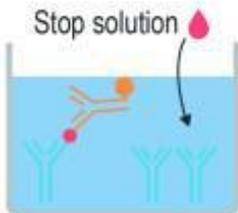

4. 每孔加入50 μ L终止液

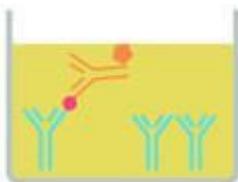


5. 立即在450nm波长下读数，处理数据



结果计算

9、以标准品浓度做为横坐标，对应的吸光度（OD 值）作为纵坐标，利用计算机软件，采用四参数 Logistic 曲线拟合（4-p1），创建标准曲线方程，通过样品的吸光度（OD 值），利用方程计算样品的浓度值。【用 ELISA Calc 软件计算，标曲建议使用四参数拟合，但不是唯一拟合方式】10、如果样品被稀释，通过上述方法测的的浓度值，要乘以稀释倍数，才是样品的最终浓度。注意：实验者需根据自己的实验建立标准曲线。每次检测，每块酶标板都必须设立标准曲线。以下曲线仅供参考！

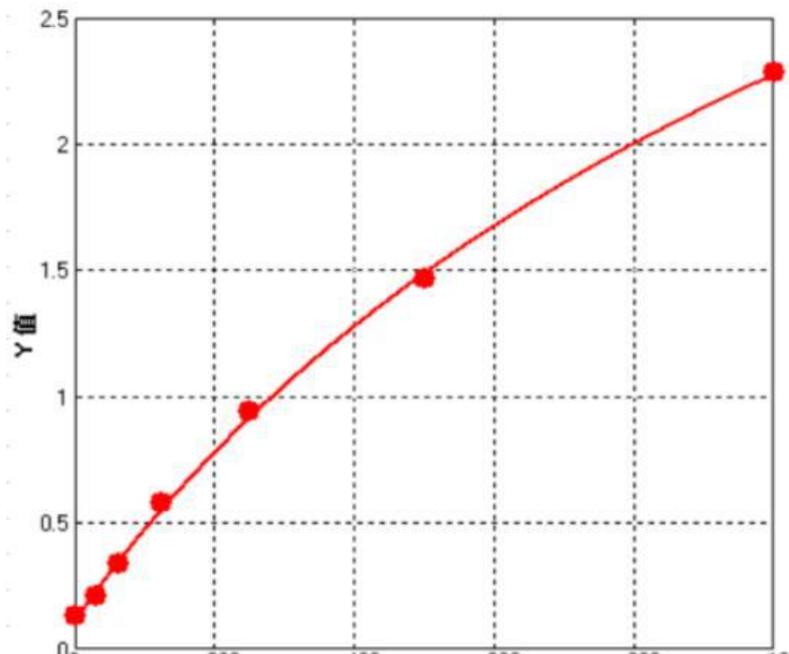

（标曲示意图，仅供参考）

Nanjing BYabscience technology Co.,Ltd



[问题分析] 若实验效果不好，请及时对显色结果拍照，保存实验数据，保留所用板条及未使用试剂，然后联系我公司技术支持为您解决问题。同时您也可以参考以下资料：[问题解答]

问题描述	可能原因	相应对策
标准曲线梯度差	吸液或加液不准	检查移液器及吸头
	平衡时间太短	保证充足的平衡时间
	洗涤不完全	保证洗涤时间和洗涤次数及每孔的加液量
显色很弱或无色	孵育时间太短	保证充足的孵育时间
	实验温度不正确	使用推荐的实验温度
	试剂体积不够或漏加	检查吸液及加液过程，保证所有试剂按顺序足量添加
	稀释不正确	
酶标记物失活或底物失效	混合酶结合物和底物，通过迅速显色来检查判断	
读数数值低	酶标仪设置不正确	在酶标仪上检查波长及滤光片设置
		提前打开酶标仪预热
变异系数大	加液不正确	检查加液情况
背景值高	检测抗体的工作浓度过高	使用推荐的稀释倍数
	酶标板洗涤不完全	保证每步清洗完全；如果用自动洗板机，请检查所有的出口是否有堵塞；是否使用试剂盒配备的洗涤液
	洗液有污染	配制新鲜的洗液
灵敏度低	ELISA 试剂盒保存不当	按说明书要求保存相关试剂
	读数前未终止	OD 读数前应在每孔中加入终止液



声明

1. 限于现有条件及科学技术水平，尚不能对所有原料进行全面的鉴定分析，本产品可能存在一定的质量技术风险。
2. 本试剂盒在研发过程中去除/降低了生物学样本中的一些内源性干扰因素，并非所有可能影响的因素均已去除。
3. 最终的实验结果与试剂的有效性、实验者的相关操作以及当时的实验环境等因素密切相关，本公司只对试剂盒本身负责，不对因使用试剂盒所造成的样本消耗负责，请使用者使用前充分考虑到样本可能的使用量，预留充足的样本。
4. 为了达到好的实验结果，请只使用本公司试剂盒内提供的试剂，不要混用其他制造商的产品，严格按照说明书操作。
5. 由于操作过程中试剂制备以及酶标仪参数设置不正确，可能导致结果异常，实验前请仔细阅读说明书并调整好仪器。
6. 即使是相同人员操作也可能在两次独立实验中得到不同的结果，为保证结果的重现性，需要控制实验过程中每一步的操作。
7. 试剂盒发货前会经过严格的质检，然而，因为运输条件、实验设备差异等等因素影响，用户检测结果可能跟出厂数据不一致。
8. 本试剂盒未与其他厂家同类试剂盒或不同方法检测同一目的物的产品进行对比，所以不排除检测结果不一致的情况。
9. 试剂盒仅供研究使用，如将其用于临床诊断或任何其他用途，我公司将不对因此产生的问题负责，亦不承担任何法律责任。

Nanjing BYabscience technology Co.,Ltd